MOUNTING INSTRUCTIONS

1. Using the .4" boot screws provided, mount the boots to the Sequence Universal Plate (5 screws per boot). Mount the front boot first. There are several mounting options for the back boot mounting position. Mount the back boot using the inserts that allow the boots to be nearest to each other. Notches in the bottom of the plate indicate a neutral stance. Be sure all screws mounting boots-to-plate are tight before proceeding to Step 2.

2. Assemble Mounting Screws (2) and Lock Washers (2). Drop this assembly into the Floating Plate Mounts through the front slots located at the tip of plate. Thread a Neck Washer onto each of the screws from the bottom side of the plate. *Be sure to tighten the Neck Washers until tight.

3. Assemble Mounting Screws (2) and Heel Plate into the Floating Plate Mount through the back slots located at the tail of the plate. Use the slot corresponding with your ski's insert pattern. Thread a Neck Washer onto each of the screws from the bottom side of the plate.

*Be sure to tighten the Neck Washers until tight.

4. Align the plate assembly with the ski's inserts. Wind in all 4 screws into ski without tightening. Alternate between tightening screws until the *Threaded Neck Washers* are firmly seated on the ski.

5. Assemble the remaining Mounting Screws (2) and Lock Washers (2). Tighten them into the Fixed Mount holes in the center of the plate to secure boot location. Radar Ski's standard mounting position is notched on the top of the plate. For use with other skis, refer to the manufacturer's recommended binding placement. For boot replacement, match the old boot's location. Measurements should be made from the heel of the front boot to the tail of the ski.

AWARNING

Check the tension of all screws before use. Screws can loosen over time and should be checked regularly for proper tightness.







