



## The Original WhisperFin

## Installation and Adjustment

Remove your old fin and clean any corrosion accumulations from your fin block. Slide your new WhisperFin into the loose clean fin block. Again, if you have to force this installation, the fin block is too tight.

Mount the fin as shown in the illustration above, with three index marks barely showing at the front and back of the fin. Keeping these index marks equal ensures the fin's turbulators are ideally oriented for maximum acceleration. Move the fin back and forth by hand, adjusting all three set screws to limit the fin's movement, until the measurement from the back of the fin to where the tail of the ski starts to curve upwards is as follows:

WhisperFin PRO:  $1\frac{3}{4}$ " (4.45 cm)

Original WhisperFin:  $1\frac{7}{8}$ " (4.75 cm)

If you have a caliper, set the DFT to:

